



P01 arbor
 P02 elastic ring
 P03 adjust nut for clutch
 P04 pin
 P05 hex head socket screw
 P06 trust bearing
 P07 pad
 P08 cluth spring(big)
 P09 cluth spring(small)
 P10 case
 P11 pin
 P12 spring washer
 P13 cluth ring
 P14 ball
 P15 buffer spring

P16 pad
 P17 driver
 P18 bearing
 P19 bearing pad
 P20 driving spindle screw
 P21 driving jaw
 P22 return driving spring
 P23 return gear
 P24 reset spring
 P25 pad for return gear
 P26 pin
 P27 gear
 P28 bearing stage
 P29 copper sleeve
 P30 bearing

P31 bearing pad
 P32 slit ring
 P33 eleatic ring
 P34 thrust stop
 P35 stop bar
 P36 hex head socket screw
 P37 hex head socket screw
 P38 driving spindle
 P39 block
 P40 double-thread screw
 P41 eleatic ring
 P42 flexible collet
 P43 pad
 P44 nut